


FISHMAN[®]

USER GUIDE
MX ONBOARD PREAMP

fishman.com

Controls

Plug In • Connect the MX to your amplifier or PA with a ¼-inch instrument cable. To conserve battery life, remove the instrument cable from the guitar when the system is not in use.

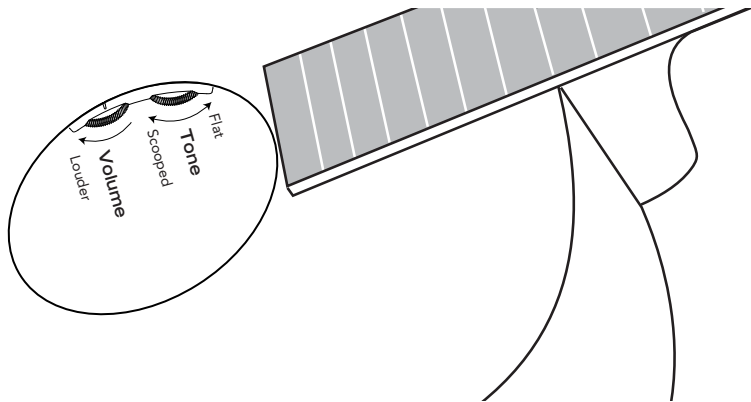

Controls

Volume • For the cleanest noise-free sound, set the volume as high as possible without causing your amp or mixer to distort.

Tone • This innovative one-knob tone control lets you adjust between the natural undersaddle sound with no EQ (flat) and a variable “Scooped” tone with emphasized bass & treble and reduced midrange.

- To make individual notes sound thicker and punchier, roll the Tone control to the right.
- Try the Tone control in the middle position for fingerpicking, when you need just a bit of midrange cut.
- Roll the Tone control all the way to the left for a neutral, unaltered tone.

Battery Replacement

Replace with either a 9-volt Alkaline or Lithium battery

FCC Compliance Statement

Model: 458-200-481

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

EU Declaration of Conformity CE

Hereby, Fishman declares that this MX Onboard Preamp is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. The Declaration of Conformity can be found at www.fishman.com/support.

FISHMAN®

fishman.com